

**Load license**

1. Select the dongle ID
2. Start the license loader
3. Load the license
4. Select the license from the local PC

