

Load license

- 1. Select the dongle ID
- 2. Start the license loader
- 3. Load the license
- 4. Select the license from the local PC

